

ITEM NO.: Z8-58-4WS

ASSEMBLY INSTRUCTIONS:

※ **WARNING: TO AVOID RISK OF ELECTRICAL SHOCK. BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.**

1. ATTACH THE UNIVERSAL MOUNTING PLATE ONTO THE OUTLET BOX USING OUTLET BOX SCREWS, ENSURE THE (FIXTURE) MOUNTING SCREWS ARE INSTALLED IN MOUNTING PLATE AND PROTRUDING AWAY FROM THE OUTLET BOX.
2. MAKE WIRE CONNECTIONS:
 - ATTACH GROUND WIRE TO THE HOUSE GROUND WIRE USING A WIRE CONNECTOR (OR ATTACH THEM TO THE UNIVERSAL MOUNTING PLATE WITH A GREEN GROUND SCREW.
 - ATTACH THE WHITE (NEUTRAL) WIRE FROM FIXTURE TO NEUTRAL WIRE FROM POWER SOURCE WITH A WIRE CONNECTOR.
 - ATTACH THE BLACK (LIVE) WIRE FROM FIXTURE TO LIVE WIRE FROM POWER SOURCE WITH A WIRE CONNECTOR.
3. TUCK THE WIRE CONNECTORS NEATLY INTO THE OUTLET BOX.
4. USING (FIXTURE) MOUNTING SCREWS (PROVIDED) ATTACH THE FIXTURE BODY (D) TO UNIVERSAL MOUNTING PLATE (F) AND SECURE WITH THE BALL NUTS (B).
5. SLIP THE SHADE (A) OVER THE FIXTURE BODY (D) WITH BALL NUT (G).
6. INSTALL TWO BULBS INTO THE SOCKETS.

USE 2PCS 60W (MAXIMUM) INCANDESCENT B TYPE BULB (INCLUDED).

※ **PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.**

※ **SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**



